



BRVSPi

Panel Status indicator

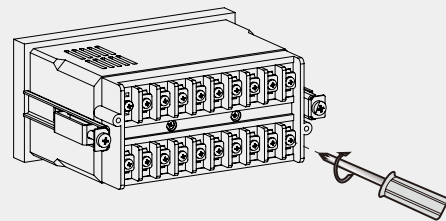

By connecting the NC of the remote signaling contact to the x1 and x2 terminal on the BRVI, the working status of the SPD will be shown on the panel status indicator.

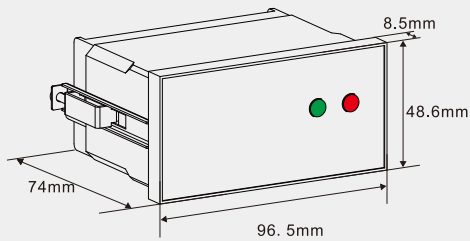

		BRVSPi
Indicator voltage	Un	230V~
Input signal		NC of the Remote Signalling Contact
Status indicator		SPD OK: Green LED on; SPD failure: Red LED on
Mounting		Screw on the panel by steel mounting bracket provided
Operating temperature range	Tu	-20°C...+60°C
Enclosure material		Thermoplastic
Degree of protection		IP20
Order Code		B6300